# Installation manual for the PetSoft S2 GPS tracker – basic version

*(abridged version v. 1.03)*

Tracker: S2 | Kit: Standard E




## Basic recommendations:

- GPS tracker power supply connected "before the ignition"
- No **metal elements** above the GPS tracker
- GPS tracker positioned with the label **"THIS SIDE UP"** facing upwards (towards open sky) **(important)**
- Protect from moisture – the casing is not waterproof.
- Do not attach the GPS tracker to metal elements of the vehicle body.

## Description of cable colours and functions:

1. Red – power supply to the tracker before the ignition (+) (from +9V= to +24V=)
2. Black – ground (-)
3. **White – permanent positive after ignition (+ after ignition)**

## Installing the GPS tracker in the vehicle – connecting the cables

To correctly install the PetSoft S2 tracker in the vehicle, you should:

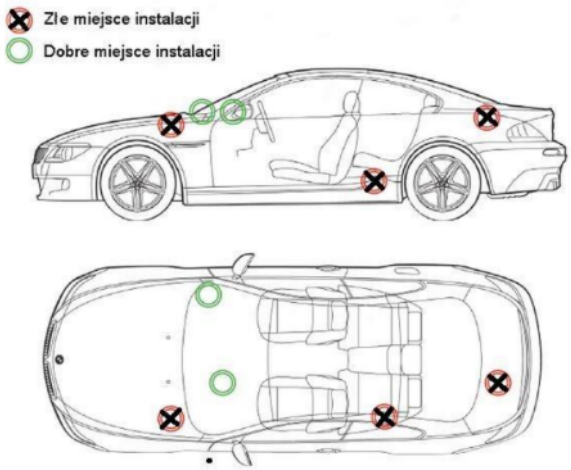
- Place the tracker in a dry area of the car (preferably in the dashboard) with the label **"THIS SIDE UP"** facing upwards
- Connect [ground] [power supply "before ignition"] [positive "after ignition"]

## Description of LED indicators on the casing

A correctly installed GPS tracker signals its operation with LED indicators. The blue LED must remain constantly lit, indicating GPS satellite visibility. The red LED must blink every 2 seconds, indicating the vehicle's position signal is being sent to the server. Any other behaviour of the LEDs indicates incorrect operation of the GPS tracker.

## Start-up

To start the device, connect the power supply to the indicated wires. Then log in to your Monitoring-GPS.net account and check the vehicle's visibility on the map.


Zle miejsce instalacji
Dobre miejsce instalacji