
Basic Installation Manual for S8.3 GPS Tracker

(abridged version v. 1.04)

Tracker: S8.3 | Kit: CAN Plus



Description of tracker connectors (view of sockets in the casing)

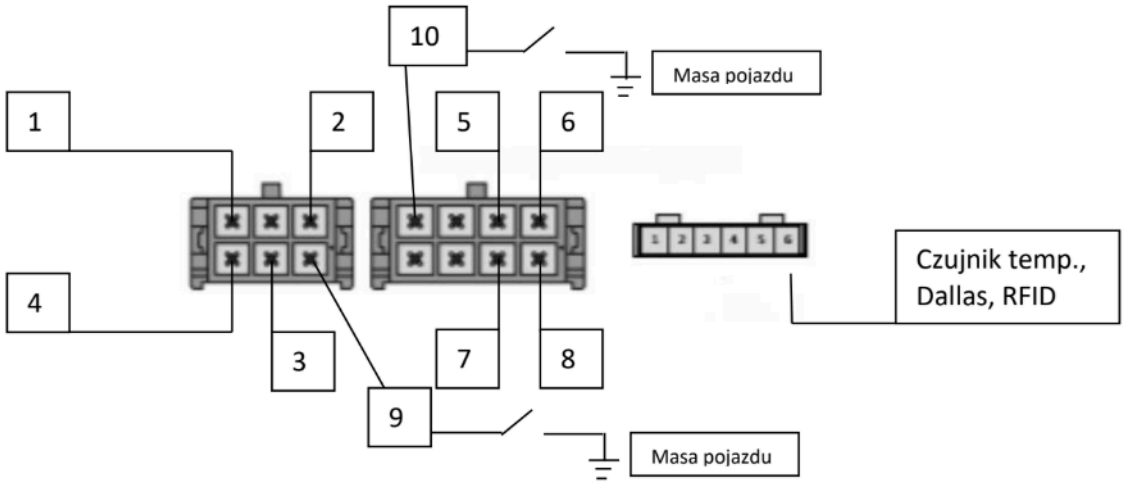

Description of cable colours and functions:

1. Red – tracker power supply before ignition (+) (from +9V= to +30V=)
2. **Purple** – permanent positive after ignition (+ after ignition)
3. **Green** – permanent positive after ignition (+ after ignition)
4. Black – ground (-)
5. Orange-green – CAN H
6. Orange-brown – CAN L
7. Green-black – J1708B
8. White-green – J1708A
9. Grey – additional ground signal (e.g. door, bonnet, or fuel cap opening) (optional) we4
10. White – additional ground signal (e.g. door, bonnet, or fuel cap opening) (optional) we5

The cable colours described above refer to the original plugs supplied with the S8.2 tracker. Other cables should remain disconnected. They are used for other device functions. In this basic version, they are not used.

Installation of the GPS tracker in the vehicle – cable connection

To correctly install the S8.2 tracker in the vehicle, you should:

- Place the tracker in a dry area of the vehicle (preferably in the dashboard)
- Connect [ground] [power supply 'before ignition'] [positive 'after ignition' x 2] [GPS antenna] [GSM antenna]

according to the diagram above

- The purple (2) and green (4) cables should be joined together and connected to the positive after ignition
- Connect the CAN and J1708 bus (if present)
- Position the GPS antenna so that there are no metal elements above it
- Leave the GSM antenna loose or attach it to a plastic or glass element. Do not attach the GSM antenna to a metal part of the bodywork.
- The distance between the GSM and GPS antennas must be at least 1m

Verification of CAN connection to the data bus (CAN/J1939/J1708)

After connecting the CAN module to the vehicle installation according to the connection diagram (provided individually for each vehicle), you should:

a. Switch on the vehicle ignition.
b. Press and hold the synchronisation button located on the side of the TERMINAL.
c. Connect the device power supply. The CAN module LED will light up red.
d. After 3 seconds, the LED will change to green – release the synchronisation button
e. The LED will start flashing red – this confirms the start of the automatic synchronisation process
f. After several seconds, synchronisation will complete:

1. **If the LED is green –** the vehicle has been recognised – switch off the power and after 5 seconds switch it on again.
2. **If the LED flashes alternately green/red –** this indicates a connection error to the bus. Please check the connections carefully and ensure they match the diagram
3. **If the LED is red –** the connection to the bus is correct but the vehicle was not recognised. The current software version will not work with this vehicle model.

Description of CAN module LED signalling

1. **Three flashes,** every 1 second – three buses connected correctly (J1939/J1708/D8 K-Line)
2. **Two flashes,** every 1 second – two buses connected correctly (J1939/J1708/D8 K-Line)
3. **One flash,** every 1 second – one bus connected correctly (J1939/J1708/D8 K-Line)

Connection diagnostics using LEDs

After connecting the above system components, check the basic operating parameters using the LEDs located on the device casing:

Green LED (GSM)

The number of LED flashes indicates GSM signal strength (on a scale of 0 – 10) – **correct operation.**

If the GSM LED remains lit for more than 30 seconds, this indicates a problem with the SIM card (incorrect PIN, damaged SIM card) **Error!**

Red LED (GPS)

The number of LED flashes indicates the number of visible GPS satellites (on a scale of 3–14) – **correct operation.**

If the GPS LED flashes twice, this indicates a problem with GPS satellite visibility. **Error!**

The test should be performed with the ignition switched on.

Installation of temperature sensor(s) (optional)

Connect the temperature sensor directly to the tracker. If there are multiple sensors, connect them using the supplied splitter. NOTE: Temperature sensors are paired with a specific tracker. They must be connected to the correct tracker according to the attached pairing instructions.

Start-up

To start the device, connect power to wire (1). Then log in to your GPS tracking account and check the vehicle's visibility on the map.