Installation Manual for mL300-1p GPS Tracker

(short version v. 1.01)

Tracker: mL300-1p | Kit: Monitoring Standard



Basic recommendations:

- GPS tracker power supply connected "before the ignition"
- No **metal components** above the GPS tracker
- GPS tracker positioned with the label **“THIS SIDE UP”** facing upwards (open sky) **(important)**
- Protect from moisture – the casing is not waterproof.
- Do not attach the GPS tracker to metal parts of the vehicle body.

Description of cable colours and functions:

1. Red – power supply to the tracker before the ignition (+) (from +9V= to +24V=)
2. Black – ground (-)

Installing the GPS tracker in the vehicle – connecting the cables

To correctly install the mL300-1p tracker in the vehicle, you should:

- Place the tracker in a dry area of the car (preferably in the dashboard) with the label **“THIS SIDE UP”** facing upwards
- Connect [ground] [power supply "before the ignition"]

Description of the meaning of the LEDs on the casing

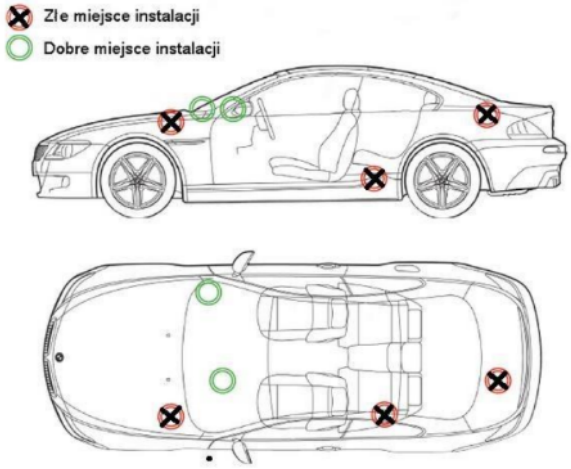
A correctly installed GPS tracker indicates its operation with LEDs as follows:

1. Red LED – Power – steady light
2. Green LED – Mobile network for data transmission – flashes every 0.5s.

Start-up

To start the device, connect the power supply to the indicated wires. Then log in to your Monitoring-GPS.net account and check the vehicle's visibility on the map.

Suggested installation locations for the GPS tracker


Zle miejsce instalacji
Dobre miejsce instalacji